

SANI-LAV[®] COLUMBIA PRODUCTS

Mid-Sized Industrial Nozzles with Brass Body and Removable Tip Model N1T Series



Model N1T



Model N1TB




Model N1TW



Model N1TR



Model N1TY

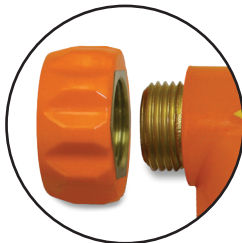

Removable 3/4" GHT threaded tip
for attaching accessories

N1T Series Universal Features


- Heavy-duty brass body and brass and stainless-steel components
- Insulated rubber cover with yellow arrow directions
- Safety shut off trigger when released
- 3/4" GHT inlet allows direct hose connection
- Threaded 3/4" Male GHT tip
- Swivel Adapter N17S (sold separately)
- Replacement parts available
- Maximum operating temperature: 200°F/93°C
- Maximum working pressure 150 psi
- Weight 1.0 lb.
- Dimensions: L 5.22" x H 5.24" x W 1.81"


Models

Color	Standard
Safety Orange	N1T
Black	N1TB
White	N1TW
Red	N1TR
Yellow	N1TY

Quick Specs

Max Temperature	200°F/93°C
Max Pressure	150 psi
Inlet	3/4" Female GHT
Tip	Threaded
Body Material	Brass
Handle Type	Stainless Steel
Weight	1.0 lb.
Hose Adapter	Model N17 (Sold Separately)
Dimensions	L 5.22" x H 5.24" x W 1.81"

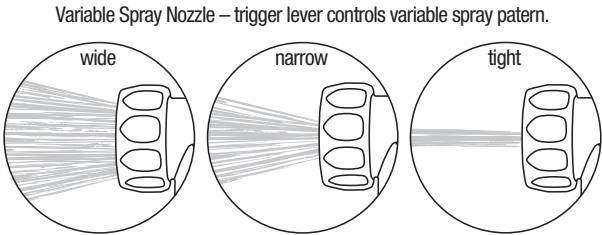




Notice for California Consumers
WARNING: This product can expose you to chemicals including Lead, and Phthalates (DEHP) which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

N1T Replacement Parts

Description	Part Number
Orange Threaded Tip	A N1TP
Orange Insolated Cover	B N1TOC
Black Threaded Tip	C N1TPB
Black Insolated Cover	D N1TBC
White Threaded Tip	E N1TPW
White Insolated Cover	F N1TWC
Red Threaded Tip	G N1TPR
Red Insolated Cover	H N1TRC
Yellow Threaded Tip	I N1TPY
Yellow Insolated Cover	J N1TYC
Brass Main Body	K N1TMB
Handle Replacement Kit	L N1HR
Barrel Cartridge Replacement Kit	M N1BR
Bolt Sleeve	N N1E
Locking Nut	O N1F

Replacement Tips and Covers

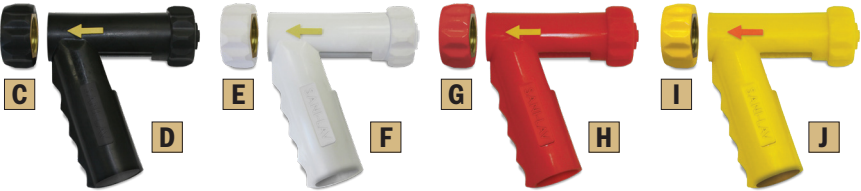

Barrel cartridge replacement kit Instructions

1. Unscrew tip **A**, pull cover **B** over the back of nozzle to expose the back end.
2. Take handle **L** off nozzle by removing parts **1**, **2**, and **3**.
3. Unscrew part **O** locking nut and remove bolt sleeve **N** and the cartridge **M**.
4. Insert the new cartridge.
5. Re-Install the handle.
6. Replace the sleeve with the open end facing down.
5. Screw the locking nut back into place.
6. Slip the cover back over the nozzle end using a round ended tool similar to a shoe horn.